



Stowaway

Collapsible BBQ & Firepit

Model No. CM155-065



- Use on the go as a BBQ or firepit
- Flat-pack design for compact storage
- Durable 2.5mm thick, 201-grade stainless steel construction
- Easy clean 304-grade stainless steel grill
- Carry bag for clean and convenient transport
- Easy access to stoke flames and refuel whilst cooking
- Assembled dimensions (mm): 360W x 330D x 250H



FOR OUTDOOR USE ONLY

DO NOT OPERATE THIS APPLIANCE BEFORE READING THE INSTRUCTION BOOKLET

DO NOT PLACE ARTICLES ON OR AGAINST THIS APPLIANCE

DO NOT STORE CHEMICALS OR FLAMMABLE MATERIALS OR SPRAY AEROSOLS NEAR THIS APPLIANCE

DO NOT OPERATE THE APPLIANCE INDOORS

DO NOT OPERATE IN AN ENCLOSED AREA. ACCESSIBLE PARTS MAY BE VERY HOT. KEEP YOUNG CHILDREN AWAY

MINIMUM CLEARANCES FROM COMBUSTIBLE MATERIALS: 1 METRE

Charmate.

is a registered trademark of: Sitro Group Australia Pty Ltd - www.sitro.com.au & Aber Living, Hamilton, N.Z - www.charmate.co.nz

Important: Retain these instructions for future use.

IMPORTANT SAFETY WARNINGS



READ ALL SAFETY WARNINGS AND INSTRUCTIONS CAREFULLY
BEFORE ASSEMBLING AND OPERATING YOUR BBQ / FIREPIT.

WARNING

- Only use this BBQ / firepit on a hard, level, non-combustible, stable surface (e.g. concrete) capable of supporting the weight of the BBQ / firepit. Never use on wooden surface or other surfaces that could burn.
- Proper clearance of 1m between the BBQ / firepit and combustible material (bushes, trees, wooden decks, fences, buildings, etc.) or construction should be maintained at all times when BBQ / firepit is in use. Do not place BBQ / firepit under a roof overhang or other enclosed area. Not adhering to these clearances will prevent proper ventilation and may increase the risk of a fire and/or property damage, which could also result in personal injury.
- For outdoor use only. Do not operate BBQ / firepit indoors or in an enclosed area.
- For household use only. Do not use this BBQ / firepit for other than its intended purpose.
- Do not use gasoline, kerosene or alcohol for lighting the BBQ / firepit. Use of any of these or similar products could cause an explosion possibly leading to severe bodily injury.
- Place BBQ / firepit in an area where children and pets cannot come into contact with unit. Close supervision is necessary when BBQ / firepit is in use.
- Do not leave BBQ / firepit unattended when in use.
- Do not store or use BBQ / firepit near gasoline or other flammable liquids, gases or where flammable vapors may be present.
- Use caution when assembling and operating your BBQ / firepit to avoid scrapes or cuts from sharp edges of metal parts. Use caution when reaching into or under the BBQ / firepit.
- In windy weather, place BBQ / firepit in an outdoor area that is protected from the wind.
- Never leave ashes in BBQ / firepit unattended. Before the BBQ / firepit can be left unattended, remaining ashes must be removed from BBQ / firepit. Use caution to protect yourself and property. Carefully place remaining ashes in a non-combustible metal container and saturate completely with water. Allow ashes and water to remain in metal container 24 hours prior to disposing.
- Extinguished ashes should be placed a safe distance from all structures and combustible materials.
- With a garden hose, completely wet the surface beneath and around BBQ / firepit to extinguish any ashes which may have fallen during use.
- After each use, clean the BBQ / firepit thoroughly. Store the BBQ / firepit to protect it from the elements.
- We advise that a fire extinguisher be on hand. Refer to your local authority to determine proper size and type of fire extinguisher.
- Store the BBQ / firepit out of reach of children and in a dry location when not in use.
- Properly dispose of all packaging material.
- Only use dry wood so you can achieve maximum warmth from your BBQ / firepit. Green wood will lead to a smokey, ineffective fire.
- Do not stack over-sized pieces of wood in the BBQ / firepit. Do not load BBQ / firepit above the solid base area of the BBQ / firepit. It is not a furnace and roaring fires are not recommended.
- Do not burn treated or painted wood as this may release toxins harmful to you and the environment.

USE CAUTION AND COMMON SENSE WHEN OPERATING YOUR BBQ / FIREPIT.


**FAILURE TO ADHERE TO SAFETY WARNING AND GUIDELINES IN THIS MANUAL COULD RESULT IN
BODILY INJURY OR PROPERTY DAMAGE.**

SAVE THIS MANUAL FOR FUTURE REFERENCE.

Assembly Instructions


For Easiest Assembly:

- Clear an area large enough to layout all components and hardware.
- Great care has been taken during production to remove sharp edges but you should handle all components with care to avoid injury.
- Check you have all components before beginning.

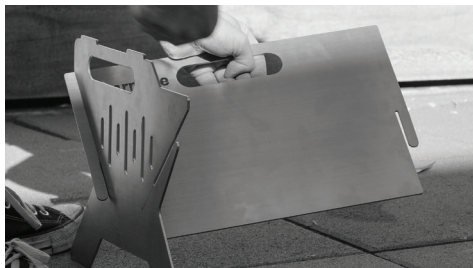

Step 1

Select one end piece and one side piece and slot them together.

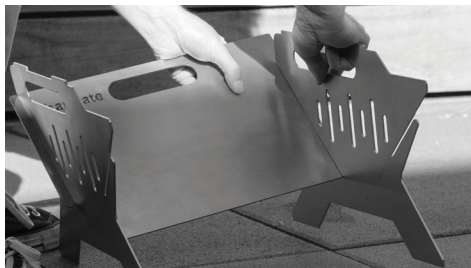


Step 2

Slot the remaining end piece into place on the side of the BBQ / firepit. Ensure flat front edges are on the same side.



Step 3

Slot in the final end piece to complete the BBQ / firepit.

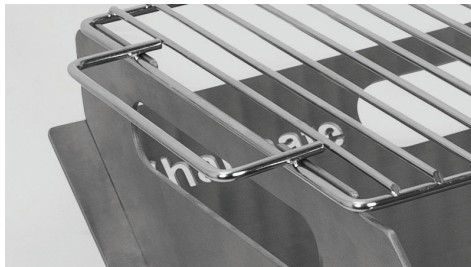

Step 4 - BBQ

To use as a BBQ place the grill on top of the base. Secure it by ensuring the grill is fitted over the end panels.



Step 5

Before use, ensure all pieces are securely slotted together.

Operating Instructions

This BBQ / firepit is designed for use only with wood or charcoal briquettes. Before first use make sure all labels, packaging has been removed from the BBQ / firepit.

Note: Split wood generally burns better than round wood. All wood should be dry. Burning green wood will lead to a smokey inefficient fire. Do not burn plastic as it gives off harmful smoke for both you and the environment.

DO NOT move when fuel is still hot, ash will fall through bottom gap and could cause injury.

Extinguishing

- Allow fire to burn itself out and don't leave until the fire is fully extinguished.
- DO NOT use water to extinguish as this is dangerous and can cause damage to this outdoor BBQ / firepit.
- If you must leave before the fire burns itself out, smother the fire with a bucket of sand to extinguish. Check the fire is fully extinguished before leaving.

Cleaning and Care

CAUTION: All cleaning and maintenance should be done when BBQ / firepit is cool and with the fuel supply removed.

Check the BBQ / firepit regularly to ensure it is safe to use. If there is any sign of damage DO NOT use until repairs are made.

Abrasive cleaners will damage this product.

1. Wipe surfaces clean with mild dishwashing detergent.
3. Rinse clean with water.

When not in use store in a dry location, in the carry bag provided.

It is quite normal for the BBQ / firepit to develop an aged look after several fires. Over time it may develop surface rust, which is normal and due to natural weathering, particularly if it is left outdoors uncovered.